

Undercounter Priming instructions (U400,U500 H500 and Ecostar models)

Buttons:

Cycle 1: Increase Value

Cycle 2: Decrease Value

Large Wash Button: Enter or Accept

On/Off Button

Step 1 – Ensure Machine is turned off on Display

Step 2 - Hold down the **On/Off Button** for 5 Seconds (Until Code is displayed)

Step 3 – Enter the code 10001 using the above Buttons. Press **ENTER**

Step 4 – “1-1” will be displayed.

Step 5 – Use **Cycle 1 Button** to scroll to:

(1-2) – Rinse Aid Priming

(1-3) – Detergent Priming

Step 6 – Press **Enter**. Display will count down

Step 7 – Press the **On/Off button** to return to Off Status.

Step 8 – Turn machine on and it should all be good.